



PF108S/PF108P INSTRUCTION MANUAL

Contents

Warnings and Precautions	2
Important Safety Instructions.....	3
In the Box, Specification, Powering the Unit.....	4
Connecting the Unit to a Computer	4
Installing the Driver and Photo Viewer Software	4
Browsing Photos, Setting the Clock, & The Auto Off Feature	5
Downloading Photos onto the Unit	6
Location of Controls & Definitions	7
Service Information.....	

Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

WARNING: Lithium ion batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Safety Instructions

1. Read Instructions - All the safety and operating instruction should be read before the product is operated.

2. Retain Instructions - The safety and operating instruction should be retained for future reference.

3. Heed Warnings - All warning on the product and in the operating instructions should be adhered to.

4. Follow instructions - All operating and use instructions should be followed.

5. Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6. Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.

7. Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like.

8. Accessories - Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



10. Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.

11. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.

12. Grounding or Polarization - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarizes plug.


Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

13. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.

14. Protective Attachment Plug - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

15. Outdoor Antenna Grounding - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

See figure:

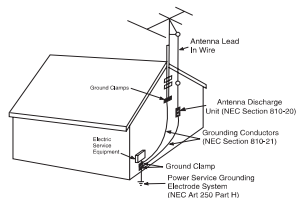

16. Lightning - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

17. Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

18. Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

19. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

20. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged,
- If liquid has been spilled, or objects have fallen into the product,
- If the product has been exposed to rain or water,
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way, and
- If the product exhibits a distinct change in performance - this indicates a need for service.

22. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

23. Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

24. Wall or Ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

25. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

In the Box

PF108

USB Cord

Software Installation CD

Documentation

Specifications

Support format: JPEG, BMP and GIF

Display: 1.1" LCD screen

Stored picture quantity: 180 sheets

Communications interface: USB 1.1 standard interface

Powering the Unit

The unit is powered by an internal lithium battery or by a USB connection to a computer. Connecting the unit to a computer via the included USB cable, will charge the unit's internal lithium battery.

Installing the Driver and Photo Viewer Software

Note: To use the product, please install the driver first and then connect the frame to the computer, otherwise, the frame driver may not complete the installation normally.

The included software supports Windows 2000 / Me / XP / Vista.

Browsing Photos

The unit's default mode once powered on is a photo slideshow mode.

During the photo slideshow, press the **Previous** and **Next Buttons** to manually cycle through the photos on the unit.

Setting the Clock

1. With the unit turned on, press the **Power Button** to access the main menu.
2. Press the **Previous** or **Next Buttons** to highlight the "Clock Set" option.
3. Press the **Power Button**.
4. Press the **Previous** and **Next Buttons** to adjust the date, then press the **Power Button**.
5. Press the **Previous** and **Next Buttons** to adjust the time, then press the **Power Button**.

The time can be displayed as a watermark over the images being displayed on the unit by navigating to and selecting "Clock Disp" in the main menu, and then selecting "Disp Clock Watermark".


The Auto Off Feature

Set the Auto Off time by selecting "Clock Set" in the main menu.

Downloading Photos onto the Unit

1. Connect the unit to a computer, and open the Photo Viewer software that was installed earlier in the instruction manual.
 2. The interface of Photo Viewer is divided into 2 sections: “Browser” window and “Device” window. Select the driver and file folder where the picture is located in “Browser” window, click the picture file in the picture file tabulator. Display the entire picture in the picture preview zone, and automatically present the maximum selectable red dotted line block. It is available to drag the dotted line to the area you want, or to click the eraser button to blank the dotted line block. Click the dotted rectangle button or press down the mouse left button to drag in the picture preview zone, and it is available to display the red dotted line block for the selection of picture zone. Click the semi-circle arrow button to revolve the picture.
 3. Click the right arrow button, release the picture zone selected to the right side picture display zone, and operate other pictures as per this operating method.
 4. Select the picture in “Device” window, then click disk icon to save the selected picture in other location. Click the “X” button to delete the selected picture.
 5. Click the download button at the upper right corner, and download all the pictures in “Device” window to the frame until the software indicates (see Fig. 2 below) download success. After a successful downloading, the picture in the frame will be renewed into the same contents in “Device” window.
 6. After the download is completed, please firstly click the upper right “X” button to turn off the Photo Viewer software, and then pull out the USB line.
-

Locations of Controls & Definitions

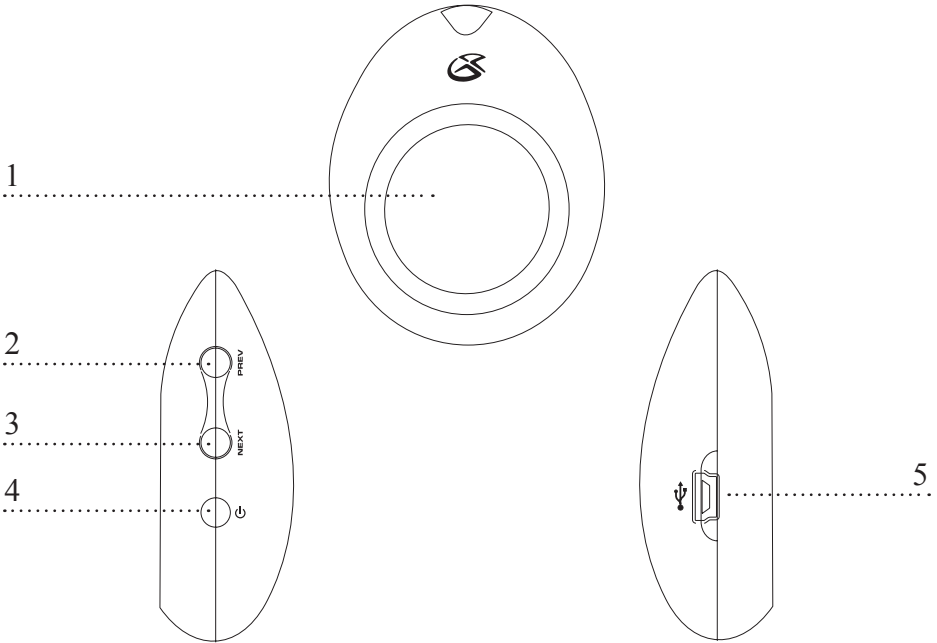

1 LCD Display

The LCD displays photos and menu information.

2 Previous Button

Press the Previous Button to skip backwards through the photos on the unit, move through the unit's menus, and adjust the date and time.

3 Next Button

Press the Next Button to skip forwards through the photos on the unit, move through the unit's menus, and adjust the date and time.

4 Power Button

Press and hold the Power Button to turn the unit on.

With the power on, press the Power Button to access the main menu.

With the power on, press the Power Button twice to turn the unit off.

5 Mini-USB Connection

Use the Mini-USB Connection to connect the unit to a computer.



Service Information

Address 2116 Carr Street, St. Louis MO, 63106
Phone 1-314-621-2881
Fax 1-314-588-1805
Email prodinfo@gpx.com
Website www.gpx.com

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.gpx.com.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.gpx.com.